

USER MANUAL

SONICBOOM® RGB

V1.1

2026/04/20



SHOWVEN Technologies Co., Ltd.

Thanks for choosing SHOWVEN® SONICBOOM® RGB, we wish it will bring you lots of exciting moments.

Please read the following manual carefully before operating this product.

▲ Safety Instructions

1. Safety icons explanation

Safety instructions warn of hazards when handling equipment and provide information on how to avoid those hazards. They are classified according to the severity of the hazard and are divided into the following groups. Please do follow all safety instructions in this document!

DANGER:

Indicates a hazardous situation that, if not avoided, will result in death or serious injury. (This signal word is limited to the most extreme situations)

WARNING:

Indicates a hazardous situation that, if not avoided, could result in serious injury.

CAUTION:

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE:

Provide additional or supplementary information.

2. General Safety Instructions


- ⚡ Unauthorized repair are prohibited, it may cause serious incident.
- ⚡ Make sure power supply is consistent with the rated voltage of the equipment, and the socket must be well grounded. Unplug and turn off the machine when not in use.
- ⚡ For adult use only, keep it away from fire, inflammable and explosive articles.
- ⚡ Installed in a well-ventilated area, ensure at least 50cm space around the machine, cover of the nozzle is forbidden.
- ⚡ If the machine fails to work, please stop operation and unplug the machine. Check fog fluid, fuse, power connection etc. carefully, if can't solve the problem, please contact SHOWVEN® or your local SHOWVEN® partner for advice.
- ⚡ Suggest use SHOWVEN® original FX-S / RED, FX-S/GREEN, FX-S/BLUE, FX-S/YELLOW, FX-S/PURPLE, FX-CI fog fluid, other fluid may lead to clog or malfunction. Please do not add any other material such as pigment, water etc. to the fuel tank.
- ⚡ If need to install SONICBOOM® RGB in invert direction, please also change the fluid tank upside down.
- ⚡ In case of eye contact of fog fluid, please wash it with clean water. If fluid is swallowed immediately look for medical advice.

Δ Technical Specifications

- \\ **DIMENSION:** 440×360×305mm
- \\ **WEIGHT:** 31kg
- \\ **VOLTAGE:** AC220-240V / AC100-120V,50/60Hz
- \\ **POWER:** 2400W(standard power mode) /1800W(low power mode)
- \\ **USAGE IN RAIN:** YES
- \\ **MAX. OUTPUT DISTANCE:** 12m
- \\ **MAX. CONTINUOUS OUTPUT DURATION:** 6s
- \\ **HEATING UP TIME:** 17min (low power mode takes longer time)
- \\ **OUTPUT:** 100000cuft/min
- \\ **FLUID CONSUMPTION RATE:** 500ml/min
- \\ **TANK CAPACITY:** 3L
- \\ **DMX CHANNEL:** 1CH-N / 2 CH-P
- \\ **DMX INTERFACE:** 3-PIN AND 5-PIN DMX
- \\ **CONSUMABLES:** FX-S/PINK, FX-S/GREEN, FX-S/BLUE, FX-S/YELLOW, FX-S/PURPLE, FX-CI

NOTICE: There is no low power mode if under RGB smoke mode (Advanced Menu / Fog Select / RGB Smoke).

Δ Structure

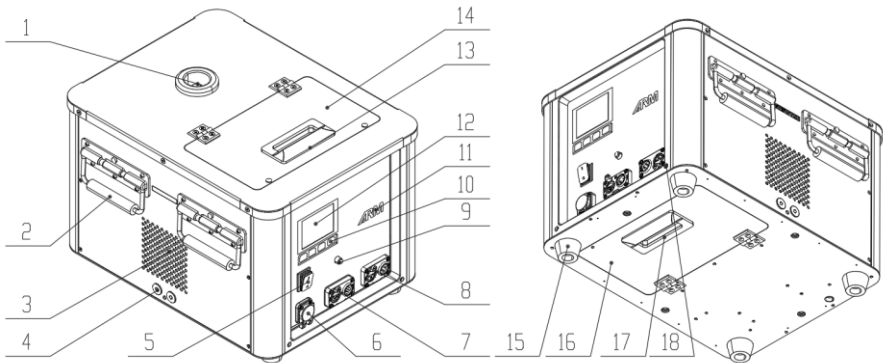

1. Output Nozzle
2. Handle
3. Air Inlet
4. Bracket Installation Hole
5. Power Switch
6. Power IN Socket

- 7. 5-PIN DMX
- 8. 3-PIN DMX
- 9. Fuse
- 10. LCD Screen Keypad Area
- 11. ARM Indicator Light
- 12. LCD Screen
- 13. Fluid Tank Top Panel Cover Handle
- 14. Fluid Tank Top Panel Cover
- 15. Feet
- 16. Fluid Tank Bottom Panel Cover Handle
- 17. Fluid Tank Bottom Panel Cover
- 18. Safety loop hole

Δ Operation Area

1. ARM alarming light



OFF: DMX IN signal.
BLINK: DMX armed, ready for firing
ON: No DMX signal.
NOTE: you can turn off the ARM light in ADVANCED menu by switch the ARM State to OFF status.

2. Dispaly Interface

①	RGB 110V			
	DMX	SAFE	TEMP	PRES
②	001	002	100	135
③	Ready			
④	MENU	TIMER	VOLUME	MONI

2.1 Status Bar

RGB: Color smoke status
Normal: Normal status
NOTICE: 110V displays only when input 110V power.

2.2 Data Bar

DMX: DMX address, red background means DMX connected.
SAFE: Safety channel address, it appears when “Channel Mode” is “1CH-P”, when safety channel DMX value is between 50-200 the background color will turn into RED, otherwise it is BLACK.

TEMP: Temp. percentage of heating block, RED background means machine temp. reached 95% of set temp. and ready to shot, otherwise it is in WHITE background. BLACK background and display 995 means temp. sensor disconnect.

PRES: Device present pressure value. RED background means machine pressure ready to shot. Background turns to WHITE if current pressure lower than setting pressure

2.3 Message Bar

Shows device status, error information if any, or firing duration and intervals when firing manually.

2.4 Touch Keypad Bar

MENU / BACK: MENU or BACK

UP / LEFT / TIMER: Parameters up, items switch up or left, firing interval

DOWN / RIGHT / VOLUME: Parameters down, items switch down or right, manual firing

MONI / EDIT / SAVE: Data monitoring, edit or save

3. Error information

Error information	Why it appears	How to remove
E0 Factory Mode	Device under "Factory Mode"	Change to "User Mode"
E1 Pressure Err	Pressurize time exceed setting time	1. Not enough fog fluid; 2. Fluid inlet hose kinked, not enough fluid flow to pump. 3. Pump over heat due to too frequent firing, wait pump cool down and restart.
E2 Temp. Sensor	Temperature sensor disconnect	Check temperature sensor, it may disconnect or damage
E3 Ptemp Over	Machine chassis (chip on PCB) over temp.	Main PCB malfunction, replace a new one
E4 Pressure Sensor	Pressure sensor disconnect	Check pressure sensor, it may disconnect or damage
E5 Temp Over	Heating block over temp.	Let machine cool down and try again, if still have E5 error means PCB control is malfunction please replace a new main PCB.
E6 Heat Fail	Heating up time exceed setting time.	Heating block power supply disconnect or heating block damage. Please check accordingly and replace heating block if necessary.
E7 Pump Protect	Pump over current	Restart machine, if it is necessary please set "Pump Protect" to OFF status in ADVANCED menu
E8 Jet Protect	Too frequent firing	Waiting 2min, error will clear automatically; try to lower the firing frequency.

4. Monitor interface:

From this interface, we can check the pressure, pump current, PCBA TEMP., heating block temp. of machine.

MONITOR	
Pressure	135
Pump Current	00.0A
PCBA Temperature	8
Temperature	29
BACK	TIMER
VOLUME	MONI

5. Main Menu

Select "MAIN" in main interface, Press "EDIT" enter main menu.

MAIN	
Set DMX Address	1
Set Power	Standard Power
RDM	OFF
Channel Mode	2CH-P
Set Safety Addr	2
BACK	UP
DOWN	EDIT

Options	Range	Default	Explanation
Set DMX Address	1~512	1	Set DMX address
Set Power	Standard / Low Power	Standard Power	Setting working power for the machine. No low power mode under RGB SMOKE mode.
RDM	ON/OFF	OFF	RDM function setting
Channel Mode	1CH-N/2CH-P	1CH-N	Channel mode switch
Set Safety Addr.	1-512	2	Safety address setting

6. Advanced Menu

Select "ADVANCED" in main interface, Press "EDIT" enter main menu.

Options	Range	Default	Explanation
Drive Test	Close/Relief/Priming/Pump /Reflux/Arm	OFF	Test the related hardware working status
Pressure Set	120-150	135	Setting target pressure
Interval Set	1-200s	30s	Interval time

Duration Set	1-8s	1s	Smoke output duration
Pump Timeout	40-60s	50s	Pump stop working after pressurize the setting time here.
Pump Protect	ON/OFF	ON	Pump protection set
ARM State	ON/OFF	ON	ARM light ON/OFF setting
语言(Language)	中文/English	English	Language switch
LCD Backlight	ON/OFF	ON	ON: LCD screen flash when firing OFF: LCD turn off after no operation during a period of time
Key Sound	ON/OFF	ON	Key pad sound ON/OFF switch
Key Lock	ON/OFF	OFF	Keypad lock if no operation in 30s, restart machine to enable
Set Stop Time	0.2s-2.0s	0.8s	Set reflux valve working time
Fog Select	RGB Smoke / Normal Smoke	RGB SMOKE	Set this item according to the fog fluid used on machine
Default Parameter	ON/OFF	OFF	Parameters reset to default setting

Δ DMX Control

There are two DMX channel mode for SONICBOOM® RGB, single channel mode and single channel with safety channel.

1CH-N

DMX value	Function
0-200	FOG OFF
201-255	FOG ON

2CH-P

Channel	DMX value and Function
Channel 1	0-200: FOG OFF 201-255: FOG ON
CH-S	Safety Channel: 50-200: pressurize and heating up; other value: heating off and firing disable.

Δ Operation Guide

1. Safety Icon



This indicates a high-temperature area nearby; please be careful to avoid burns.


WARNING:

The output nozzle and surrounding area are high-temperature zones and should not be touched to avoid burns.

2. Safety distance explanation

Safety distance for SONICBOOM RGB divided into two parts safety radius around machine (a) and safety distance at firing direction (b). No person and objects/materials that are easily stained are allowed to stay inside the safety isolation zone when SONICBOOM RGB was armed.

The safety isolation zone (show as below) is a cylindrical three-dimensional space with Safety radius around machine (a) and Height of b. Unauthorized persons and objects/materials that are easily stained are strictly prohibited from entering.

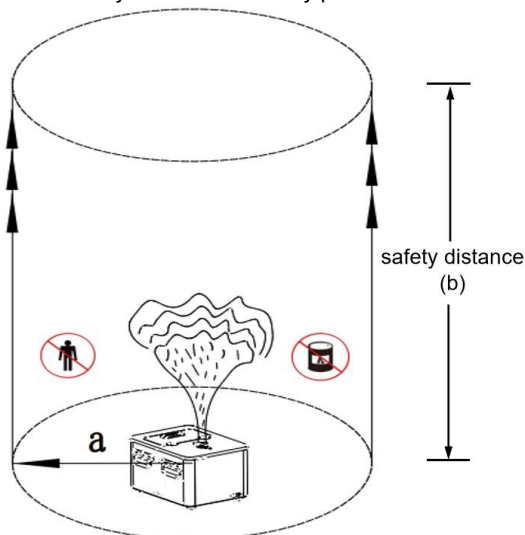

Safety distance	Wind force level 0-1	Wind force level 2-3
a	4m	8m
b	20m	20m

NOTICE:

The safety distance is primarily set to prevent colored smoke from staining other surfaces. If using SHOWVEN fog fluid FX-CI or if there are no easily stained objects nearby, the operator can adjust the safety distance appropriately based on their assessment of the surrounding environment and the safety of the device.

CAUTION: When the wind force exceeds level 3, the smoke effect of the equipment will be severely affected.

DANGER: Once the equipment is turned on, the nozzle should not be pointed at personnel or block the output nozzle.

3. Installation


SONICBOOM® RGB mostly suggest to use in outdoor and well-ventilated environment, it can be installed in any direction even upside down. But please watch out for the fog fluid leakage from the fluid tank.

For upside-down installation, please take out the fluid tank first, turn machine upside-down then place the fluid tank back again.

For safety, hanging installation should install safety rope.

The bracket and clamps are optional parts, if you need please contact SHOWVEN sales to order.

CAUTION: Make sure the color smoke column not pointing to any objects or easily stainable surfaces, it may coloring the surface of objects.

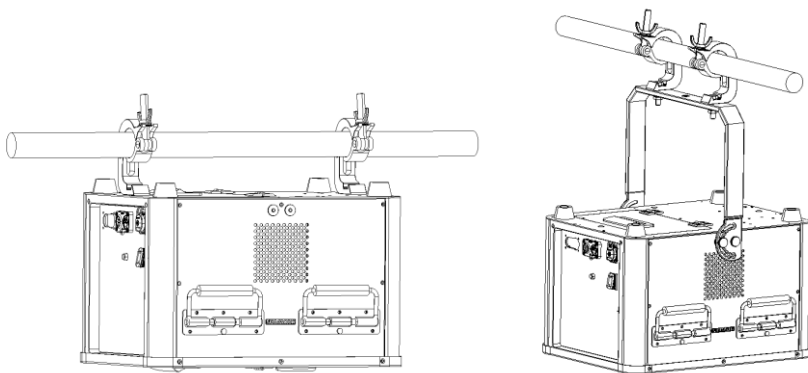

4. Fill the machine

Fill the fluid tank with SHOWVEN color smoke fluid.

Improper use of fluid will lead to machine malfunction. Warranty will be void if any other type of fog fluid is used.

NOTICE: Always wearing gloves when filling fluid bottle and handling this equipment.

5. Power ON SONICBOOM® RGB

Connect the machine to suitable rated power supply. Make sure power supply in consistent with the rated voltage of the equipment, and the socket must well grounded.

Turn on the machine and allow it to heat up. It shows "Warm up" on LCD screen. It takes around 17min for the machine to finish heating up.

There are Standard power mode and Low power mode switchable, based on the power supply circumstance operator can switch the power mode in the menu. When in Low power mode the heating up time will be longer.

6. DMX setting and Programming

Set DMX address for each machine. Connect machines with DMX cable in series.

Suggest to plug in a DMX terminator into the DMX out in last unit of machine.

If operate manually, please disconnect DMX connection.

Programming all SONICBOOM RGB on FXcommander or your own console.

Examples of Firing intervals and firing durations for SONICBOOM RGB as below for your information.

Firing Duration	Min. Interval	Max. firing repeat	Remark
1s	10s	12	After repeat 12 times, a 180s interval needed
2s	10s	12	
3s	20s	8	After repeat 8 times, a 180s interval needed
4s	20s	8	
5s	30s	6	After repeat 6 times, a 180s interval needed
6s	30s	6	

Note: Minimum interval means the interval between firing, it is the time for pump to pressurize and restore the pressure to target firing pressure.

WARNING: Insufficient interval time, may leads to firing disable or firing failures due to the pressurization is not completed.

WARNING: Too frequent firing will leads to pump overheat, activate pump protection. In this case, please stop use machine and keep it cool down for 1h.

7. Firing

Once the machine has reached operating temperature, the LCD display of TEMP and PRES background color turns to red, and "TEMP" value reached 100, "PRES" value reached 135. Now the machine is ready for operation.

Manual operation: Press the "VOLUME" to start generating fog, press "STOP" to stop.

DMX control: please operate according to the DMX control table.

Double check the objects and person around machine, make sure the color smoke column not pointing to any person or objects.

8. Cleaning Process

After each show please remove color smoke fluid bottle and use FX-CI or distilled water to clean the pipe system by firing machine 5-10times. The cleaning process are as below:

- Depressurize the device. Power OFF the device, then turn it ON again, After hearing the start-up prompt sound, the device will immediately begin a depressurization operation. You will hear the pressure relief valve opening and the sound of pressure releasing from the pipeline. The total time is approximately 6 seconds. After the depressurization operation is complete, please turn off the power immediately to prevent the device from re-extracting colored smoke fluid and pressurizing it.
- Remove color smoke fluid bottle from machine, use FX-CI or distilled water (500ml minimum)
- Start the equipment and set the firing duration (no less than 6s), firing by controller or press "Volume" to firing if firing manually. Repeat this process 5-10 times. If the heater temperature is lower than the firing temperature, do not operate. Wait until the temperature rises back above 95% before continuing. The number of firing cycles depends on the color of the output smoke. When the smoke is white or colorless, the cleaning is considered complete.
- Depressurize the machine by following step A, power OFF SONICBOOM RGB.

WARNING: Cleaning process is very important for the service life of machine, heating aluminium block will easily clogged if not cleaned after each show.

9. Packing and storage of machine and color smoke fluid

Please empty the fluid tank and clean the machine.

Allow the machine to cool down before packing it.

The the remaining color smoke fluid, please reseal the fluid bottle with original cap and store it in a cool and dark place. Do not tilt or invert the fluid bottle to prevent leakage and evaporation.

Δ FAQ

FAQ	Why it happens	How to solve it
Few smoke output	1. Fog fluid is not enough 2. Pipe system is blocked	1. Filling the fog fluid tank, if there is ediment, please shake it well 2. Clean or replace the filter in fluid tank. 3. Use FX-CI to clean the pipe system by unning the cleaning process as described previously. 4. If still not work, then need to replace the heating aluminum block.
Machine reached setting temp. but still no smoke output	Heating block clogged	Replace the heating block
Temp. can't reach setting temp.	Heating block's thermal protector was activated and disconnected	1. Please check whether cooling fan is working normally 2. Power OFF machine and let machine cool down, then restart machine.
Pressure fail to reach setting pressure, pump is not working	1. Pump protected due to over heat 2. Pump clogged or damaged	1. Too frequent firing makes pump over heat, please wait pump cool down 2. If pump was clogged or damaged please replace a new pump
Machine can't be controlled by controller	Signal disconnected	1. Check DMX connector on machine 2. Check DMX cable
Smoke output is not vertical up	The nozzle is obstructed by debris.	Power off machine, wait it cool down, check and clean output nozzle.

Δ Maintenance

1. Use SHOWVEN® original color smoke fluid FX-S/PINK, FX-S/GREEN, FX-S/BLUE, FX-S/YELLOW, FX-S/PURPLE or FX-CI.
2. Flushing SONICBOOM RGB by following the cleaning process as described above after each show.
3. Running the machine at least once per month.
4. Whenever storage or not use the machine for a period of time, please use distilled water to wash the pipe system by filling the fluid bottle with distilled water and firing the machine several times.
5. Clean the output nozzle when necessary.

Δ Optional Parts for SONICBOOM RGB

Part. No.	Description	Pcs/machine
RMBOT036	Safety loop	2
RMSTE1957	Bracket (optional parts)	1
RMBOT312	hand-tightening screws and bolts M6*20	4
RMWAS104	Gasket 16*16*2mm	2
RMSTE1953	Clamps	2

Δ Warranty Instructions

- ✓ Sincere thanks for your choosing our products, you will receive quality service from us.
- ✓ The product warranty period is one year. If there are any quality problems within 7 days after shipping out from our factory, we can exchange a brand new same model machine for you.
- ✓ We will offer free of charge maintenance service for machines which with hardware malfunction (except for the instrument damage caused by human factors) in warranty period. Please don't repair machine without factory permission.

Below situations NOT included in warranty service:

- ✓ Damage caused by use other type of fog fluid which is not SHOWVEN® original color smoke fluid.
- ✓ Damage caused by improper transportation, usage, management, and maintenance, or damage caused by human factors;
- ✓ Disassemble, modify or repair products without permission;
- ✓ Damage caused by external reasons (lightning strike, power supply etc.)
- ✓ Damage caused by improper installation or use;
- ✓ For product damage not included in warranty range, we can provide paid service.
- ✓ Invoice is necessary when applying for maintenance service from SHOWVEN®.

SHOWVEN[®]



Showven Technologies Co., Ltd.

Tel: +86-731-83833068

Web: www.showven.cn E-mail: info@showven.cn

Add: No.1 Tengda Road, Liuyang Economic & Technical Development Zone, Changsha, Hunan,
410300, P.R.China