

USER MANUAL

cFlamer Quad

V1.3

2025/09/02

SHOWVEN®



SHOWVEN Technologies Co., Ltd.

Thanks for choosing SHOWVEN cFlamer Quad, we wish it will bring you lots of exciting moments. Please read the following user's manual and related product installation guide carefully before operating this device.

▲ Safety Instructions

1. Safety icons explanation

Safety instructions warn of hazards when handling equipment and provide information on how to avoid those hazards. They are classified according to the severity of the hazard and are divided into the following groups. Please do follow all safety instructions in this document!

DANGER: Indicates a hazardous situation that, if not avoided, will result in death or serious injury. (This signal word is limited to the most extreme situations)

WARNING: Indicates a hazardous situation that, if not avoided, could result in serious injury.

CAUTION: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE: Provide additional or supplementary information.

2. General Safety Instructions

- ✖ Unauthorized repair are prohibited, it may cause serious incident.
- ✖ Make sure the power supply is consistent with the rated voltage of the equipment, and the socket must be well grounded. Unplug and turn off the machine when not use.
- ✖ Please connect DMX cable before power on cFlamer Quad, and ensure that the communication command is disarmed, and the safety switch of device is under test mode.
- ✖ After turning on the device, no person allows to stay in the safety isolation zone. Ensure all persons that are part of the show be informed about the safety distance, risks and functions of the device.
- ✖ Always have a CO₂ fire extinguisher and an extinguishing blanket in case of needed.
- ✖ If there is any doubt as to the safety operation of the device in any circumstances, the device should be taken out of service immediately. Be sure the device is in good operating condition before use. If it fails to fire correctly, immediately shut down and check it accordingly. Any questions please always contact SHOWVEN (info@showven.cn) for help.
- ✖ Be sure to use high quality fuels, otherwise, it easily leads to failure or danger. Please keep fuels away from heat source, sparks, fire or other possibility of ignition. Do not smoke!
- ✖ The operator responsible for the control of flame system must always have a clear view of the device, so that he/she can stop the show immediately when there is danger. The main AC power switch should near operator. So that operator can turn off the power of all devices in case of abnormal.
- ✖ Please connect the device with SHOWVEN E-STOPPER so that the operator can stop the device immediately if there is any emergency case.
- ✖ The device shall not be altered and applied for other purposes.

3. Disclaimers:

SHOWVEN technologies Co., Ltd excludes liability for unsafe situations, accidents and damage resulting from:

1. Ignoring warnings or regulations as shown on product manual or this manual.
2. Use for other applications or circumstances other than those indicated herein.
3. Changes to the device, including use of non-original spare parts, lack of maintenance etc.
4. Dismantling device without authorization from SHOWVEN.
5. Use this machine by unqualified or untrained personnel.
6. Improper use of machine.


Warning:

A dry powder fire extinguisher, a carbon dioxide fire extinguisher and a fire blanket must be equipped next to the equipment. Someone must be on duty during the operation. In case of fire accidents, dry powder fire extinguisher can be used when the fire is large, and a carbon dioxide fire extinguisher can be used when the fire is small.

△ Technical Specifications


- Model:** cFlamer Quad
- Housing Material:** Stainless steel + Aluminum
- Dimension:** 585×419×330mm
- Weight:** 51kg
- Input:** AC100-120V / AC 200-240V, 50/60Hz
- Work Power:** 1500W
- Ignition:** Quad igniters, high voltage electron ignition
- Control:** DMX , 9-60V pyro signal, Wireless with Wireless DMX Receiver (5-PIN DMX IN with DC5V power supply)
- DMX:** 3-pin and 5-pin DMX IN / OUT
- E-Stop Interface:** Yes, can be connected in series
- Effect Direction:** Vertical
- Flame Height:** 8-10m(no wind, Combo NOZZLE cH, SHOWVEN color fluid, ISOPAR L, ISOPROPANOL);
5-6m (no wind, Combo NOZZLE cL,SHOWVEN color fluid, ISOPAR L, ISOPROPANOL);
- Color Changing Flames:** Yes
- Tank Capacity:** 2.5L * 4
- Fuel:** SHOWVEN color fluid, ISOPAR L, ISOPROPANOL
- Color Optional:** Red, Gren, Blue, Yellow, Purple (only compatible with SHOWVEN original color fluid)
- Fuel Tube Filter:** Yes
- Tip sensor:** Yes
- Usage in Rain:** Yes
- ARM light:** Yes

▲ Structure

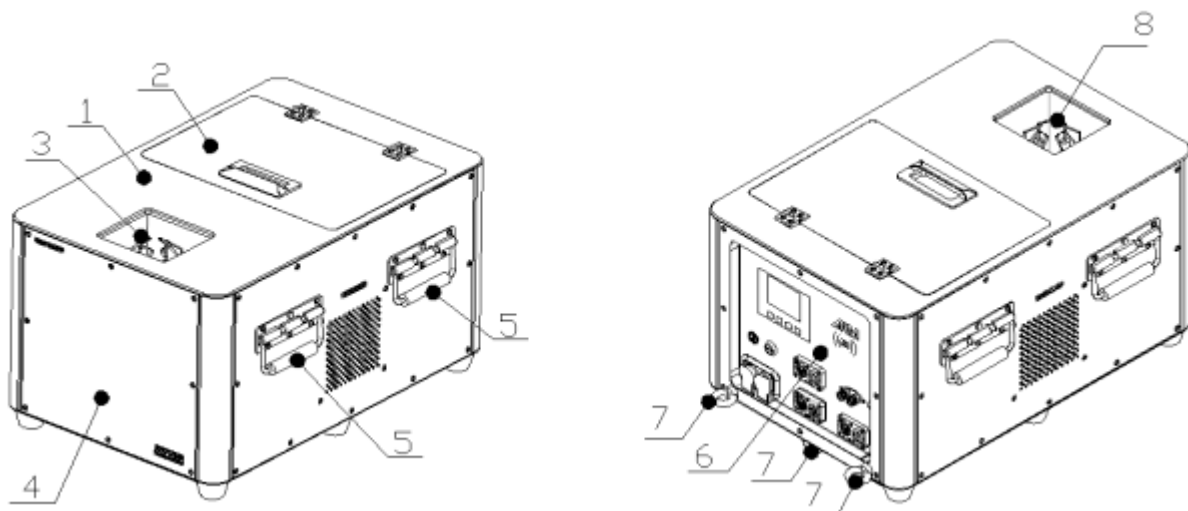


1. Top panel
2. Fuel tank cover
3. Fire box
4. Front panel
5. Handle
6. Rear panel
7. Safety loop (optional)
8. Igniter

Diagram of bottom panel

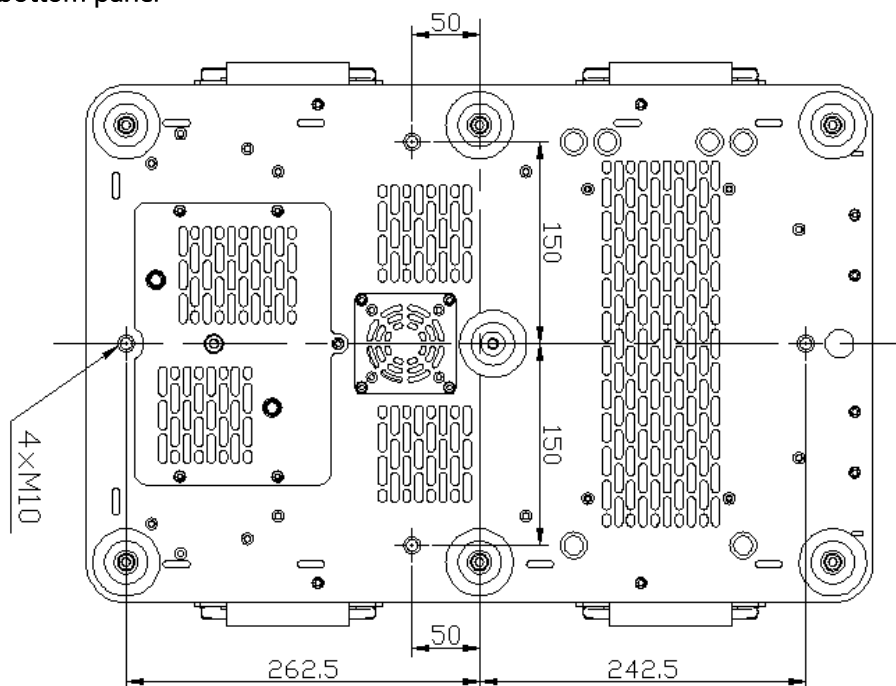

△ Rear Panel

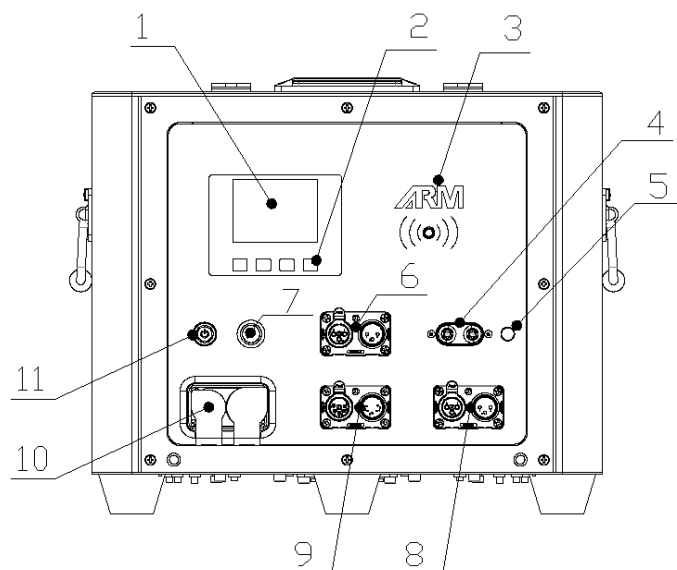


1. LCD screen
2. Touch button
3. ARM indicator light
4. 9-60V pyro signal port
5. Rubber stopper
6. 3-pin XLR IN/OUT
7. Safety switch
8. E-stop interface
9. 5-pin XLR IN/OUT (5-PIN XLR IN can charge for wireless DMX pen through pin1 and 4, pin4 with DC5V power supply)
10. Power Switch (with Power indicator light)
11. Power IN / OUT

△ Display and setting

1. Welcome interface

Version	FA03-250214
Serial Number	*****
Pump Run Time	00:00:00
Ignition Times	XX

2. Main interface

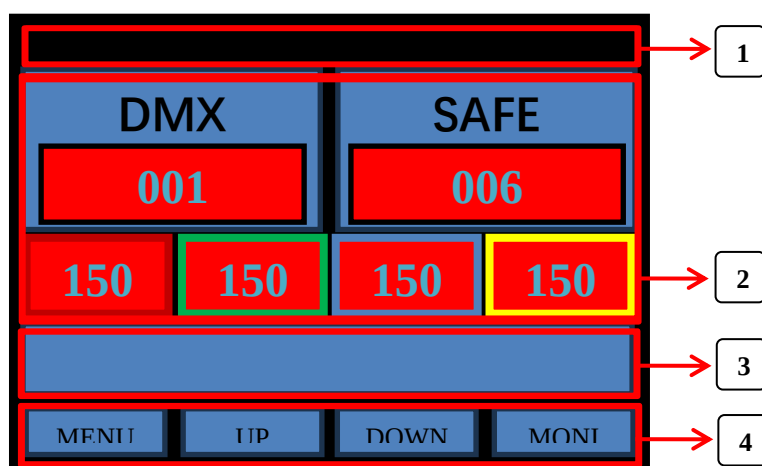

1.) Status Bar

-  : appears when "External Trigger" is "No.1-No.69"
-  : appears when "safety switch" stay at "USER MODE"
- 6N/6M/6P:** DMX channel mode

2.) Data Bar

- DMX:** DMX address, Background turns from BLACK to RED when DMX cable was connected.
- SAFE:** Safety address, Background turns from BLACK to RED when DMX cable was connected and safety channel activated.
- PRES:** Value in below 4 blocks are pressure value of each pipeline. Background turns from BLACK to RED when pressure reached / exceed 90% of "set pressure" value.

3.) Message Bar

USER MODE / error or alert information display, Background color turns to RED when under "USER MODE".

4.) Touch Button function display:

- First Button:** MENU / BACK
- Second Button:** UP / LEFT
- Third Button:** DOWN / RIGHT
- Fourth Button:** MONI / EDIT / SAVE

3. ARM indicator light



Operators can enable/disable the arm indicator light by set the "ARM STATE" in ADVANCED menu. If "ARM STATE" is ON, there will be three status:

- OFF:** DMX signal input
- BLINK:** DMX armed or Ext Ignite in advanced menu is ON
- ON:** no DMX signal and Ext Ignite in advanced menu is OFF

4. Alert Message

Alert Message	Why it appears	How to remove
E0 Test Mode	Safety Key Switch at TEST MODE	Switch Key to USER MODE
E0 Factory Mode	Factory mode	Switch to Normal mode
E0 ExtIgnite ON	"External Trigger" is set to No.1 to No.69	Set "External Trigger" to "OFF" in Advanced menu
E0 Ignition Disenable	Any one of "Ignition" of 1-4 is "Disenable"	"Enable" all 1-4 "Ignition" in Factory menu
E0 Pump Disable	Any one of "Pump" of 1-4 is "Disable"	"Enable" all 1-4 "Pump" in Advanced menu
E0 Key Lock	Touch button no operation in 30s	Restart machine

5. Error Message

Error Message	Why it appears	How to remove
E1.1/1.2/1.3/1.4 Pressure Err	Consecutive pressurize failure times exceed "Pressure Fail Cnt" setting value in factory menu. Possible reasons: 1. Fuel tank empty 2. Pump failure 3. Fuel leakage 4. Pressure sensor damage 5. Pressure relief valve malfunction 6. Pipe system cannot maintain pressure.	Restart machine and check below items accordingly 1. Fill tank 2. Check pump 3. Check whether there is leakage inside machine 4. Check pressure sensor 5. Check relief valve 6. Check relief valve and check valve, or whether there is leakage inside machine.

E2.1/2.2/2.3/2.4 P Relief Err	Pressure high after depressurize. Possible reasons: 1. Pressure relief valve malfunction 2. Fuel pipe block	Restart machine and check below items accordingly 1. Pressure relief valve 2. Check fuel pipe
E3.1/3.2/3.3/3.4 Press Sensor	Pressure sensor disconnect / damage	please check related pressure sensor.
E5 DC Err	1. Switching power supply damage 2. Main board malfunction or mainboard voltage detection error	1. Replace switching power supply. 2. Check or replace main board
E6 Tip Err	1. Machine slant over 45°, it stops running. 2. Main board malfunction	1. Tip setting set to OFF, or horizontal install machine. 2. Replace main board

6. Monitoring Interface

Press "MONI" enter below interface

Menu	Explanation
Pressure 1	Current pressure value of pipeline 1. -62 means pressure sensor disconnected
Pressure 2	Current pressure value of pipeline 2. -62 means pressure sensor disconnected
Pressure 3	Current pressure value of pipeline 3. -62 means pressure sensor disconnected
Pressure 4	Current pressure value of pipeline 4. -62 means pressure sensor disconnected
DC voltage	DC power supply voltage
User Mode	<10V is under test mode
Pump Run Time	Accumulative pump working time
Ignition Times	Accumulative ignition times

7. Menu Interface

Press "MENU" enter below interface

Menu	Explanation
MAIN	Main menu
ADVANCED	Advanced menu
TEST	Test menu
FACTORY	Factory menu (factory use only)

8. Main menu

Select "MAIN" in menu interface, press "EDIT" enter main menu. Use UP / DOWN / SAVE to change the parameters.

Menu	Range	Default	Explanation
Set DMX Address	1-507	1	DMX address setup
DMX Mode Select	6CH-N/6CH-M/6CH-P	6CH-N	DMX mode setup
Set Safety Address	1-512	6	Safety address setting under 6CH-P mode

9. Advanced menu

Select "ADVANCED" in menu interface, press "EDIT" enter advanced menu. Use UP / DOWN / SAVE to change the parameters.

Items	Contents	Default	Description
External Trigger	OFF / No.1-No.69	OFF	Trigger through 9-60V pyro ignition signal. OFF: Turn off external trigger No.1-No.69: related preset firing sequence trigger through External trigger
Tip Setting	OFF / ON	ON	Turn ON/OFF tip over function
Pump 1	Enable / Disable	Enable	Pump 1 Enable / Disable setting
Pump 2	Enable / Disable	Enable	Pump 2 Enable / Disable setting
Pump 3	Enable / Disable	Enable	Pump 3 Enable / Disable setting
Pump 4	Enable / Disable	Enable	Pump 4 Enable / Disable setting
Key Sound	ON/OFF	ON	Touch button sound ON / OFF
ARM State	ON/OFF	ON	ARM indicator light ON/OFF setting
LCD Backlight	ON/OFF	ON	LCD backlight ON/OFF. When ON, screen will flash when firing; OFF: LCD screen will turn off when no operation.
Key Lock	ON/OFF	OFF	ON: Touch button will disable if there is no operation in 30s. restart machine to active touch button.
Default Parameter	ON/OFF	OFF	Reset default parameter settings

10. Test menu

Please disconnect DMX connection before enter test menu.

Select "TEST" in menu interface, press "EDIT" enter test menu. Use UP / DOWN / SAVE to change the parameters.

"External Trigger" will disable after enter TEST menu, Pressure relief valve will open, below related items will shows "Running" when testing, shows "Finish" after test finished.

Items	Description
ARM Test	Test ARM indicator light, blink once/s, blink 3 times
Jet 1 Valve Test	Jet valve of output 1 ON/OFF 3 times, 1s per time. Operation: choose related "Jet Valve X Test", turn safety switch to "User Mode", press "ENTER". Below Jet Valve test are the same.
Jet 2 Valve Test	Jet valve of output 2 ON/OFF 3 times, 1s per time.
Jet 3 Valve Test	Jet valve of output 3 ON/OFF 3 times, 1s per time.
Jet 4 Valve Test	Jet valve of output 4 ON/OFF 3 times, 1s per time.
Relief 1 Test	Relief valve 1 ON/OFF 3 times, 1s per time
Relief 2 Test	Relief valve 2 ON/OFF 3 times, 1s per time
Relief 3 Test	Relief valve 3 ON/OFF 3 times, 1s per time
Relief 4 Test	Relief valve 4 ON/OFF 3 times, 1s per time
Igniter Test	Igniter ON/OFF 3 times, 1s per time. Start from Igniter 1 to 4.
Pump 1 Test	Pump 1 will pressurize to "Set Pressure" value and keep 0.2s, and display "F". If pressurize time exceed setting value of "Max Pressure Limit", means pump test fail, it will display "E". Display "R" means machine is pressurizing.

Pump 2 Test	Pump 2 will pressurize to "Set Pressure" value and keep 0.2s, and display "F". If pressurize time exceed setting value of "Max Pressure Limit", means pump test fail, it will display "E". Display "R" means machine is pressurizing.
Pump 3 Test	Pump 3 will pressurize to "Set Pressure" value and keep 0.2s, and display "F". If pressurize time exceed setting value of "Max Pressure Limit", means pump test fail, it will display "E". Display "R" means machine is pressurizing.
Pump 4 Test	Pump 4 will pressurize to "Set Pressure" value and keep 0.2s, and display "F". If pressurize time exceed setting value of "Max Pressure Limit", means pump test fail, it will display "E". Display "R" means machine is pressurizing.

▲ DMX CONTROL

cFlamer Quad with 3 different channel mode: 6CH-N, 6CH-M and 6CH-P.

6CH-N(6N):

In 6CH-N channel mode cFlamer Quad occupies 6 functional channels.

Channel	Function	Value
CH1	Manual Output setup	0~64: output 1 65~128: output 2 129~192: output 3 193~255: output 4
CH2	-	reserved
CH3	Firing ON/OFF	0~253: Firing OFF 254~255: Firing ON
CH4	Firing Duration setup	0 and 255: permanent fire (2s is limit duration time) 1~254: 10~2540ms duration time (Manual firing duration = DMX Value * 10ms)
CH5	Preset sequence setup	0-2: no preset sequence 3-255: preset sequence DMX value = 2 + Sequence No. * 2.55 (ROUND OFF) Preset sequence will disable CH1 and CH4
CH6	Firing Enable / Disable	0~49 and 201~255: Firing Disable (Emergency STOP) 50~200: Firing Enable

6CH-M(6M):

In 6CH-M channel mode cFlamer Quad occupies 6 functional channels. Each output nozzle allocate a separate channel.

Channel	Function	Value
CH1	Output 1 Firing	0~253: Firing OFF 254~255: Firing ON
CH2	Output 2 Firing	0~253: Firing OFF 254~255: Firing ON
CH3	Output 3 Firing	0~253: Firing OFF 254~255: Firing ON
CH4	Output 4 Firing	0~253: Firing OFF 254~255: Firing ON
CH5	-	reserved
CH6	Firing Enable / Disable	0~49 and 201~255: Firing Disable (Emergency STOP) 50~200: Firing Enable


6CH-P(6P):

In 6CH-P channel mode cFlamer Quad occupies 5 functional channels and a separate safety channel CH-S (this channel is independent from operational channel, can be shared with other machine).

Channel	Function	Value
CH1	Manual Output setup	0~64: output 1 65~128: output 2 129~192: output 3 193~255: output 4
CH2	-	reserved
CH3	Firing ON/OFF	0~253: Firing OFF 254~255: Firing ON
CH4	Firing Duration setup	0 and 255: permanent fire (2s is limit duration time) 1~254: 10~2540ms duration time (Manual firing duration = DMX Value * 10ms)
CH5	Preset sequence setup	0-2: no preset sequence 3-255: preset sequence DMX value = 2 + Sequence No.*2.55 (ROUND OFF) Preset sequence will disable CH1 and CH4
CH-S	Firing Enable / Disable	0~49 and 201~255: Firing Disable (Emergency STOP) 50~200: Firing Enable

▲ Firing Nozzle Explanation

The firing nozzle of cFlamer Quad is a combo nozzle of 4, as you can see from below picture. Nozzle 1 corresponding to fuel tank with RED tag; Nozzle 2 corresponding to fuel tank with Green tag; Nozzle 3 corresponding to fuel tank with Blue tag; Nozzle 4 corresponding to fuel tank with Yellow tag.

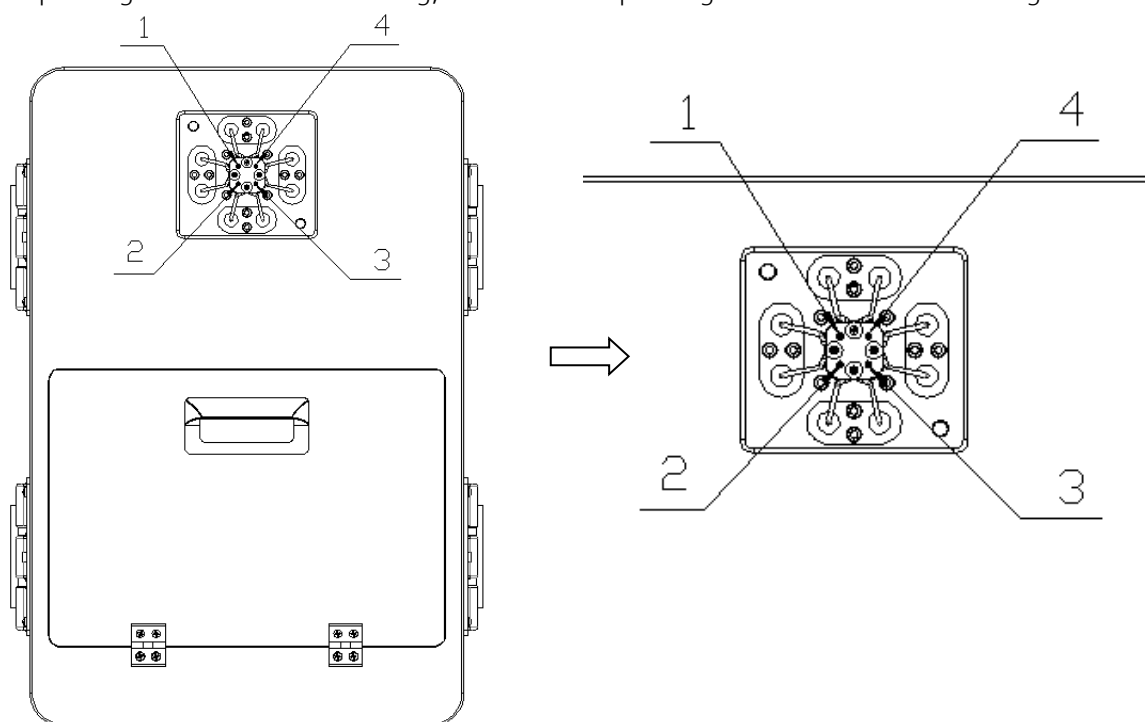

▲ cFlamer Quad Preset Firing Sequences

cFlamer Quad has 79 preset sequences, operator use related channel DMX value or sequence No. to access certain sequence. Below, you can find sequence list and single ignitions.

Single Ignition Sequence List

No.	Ignition Nozzle	Description	Single Shot Duration	Firing Duration (For reference)	CH5 DMX Value
1	1	Single Ignition	Firing duration controlled by CH3, max. 2s.		3-5
2	2	Single Ignition	Firing duration controlled by CH3, max. 2s.		6-7
3	3	Single Ignition	Firing duration controlled by CH3, max. 2s.		8-10
4	4	Single Ignition	Firing duration controlled by CH3, max. 2s.		11-12
5	1	Single Ignition SHORT flame	0.06s	0.06s	13-15
6	2	Single Ignition SHORT flame	0.06s	0.06s	16-17
7	3	Single Ignition SHORT flame	0.06s	0.06s	18-20
8	4	Single Ignition SHORT flame	0.06s	0.06s	21-22

Step Sequences List

No.	Ignition Nozzle	Description	Single Shot Duration	Firing Duration (For reference)	CH5 DMX Value
9	Step from 1-4	SHORT flame Step sequence	0.06s	0.6s	23-25
10	Step from 4-1	SHORT flame Step sequence	0.06s	0.6s	26-28
11	Step 1>3>2>4	SHORT flame Step sequence	0.06s	0.6s	29-30
12	Step 3>1>4>2	SHORT flame Step sequence	0.06s	0.6s	31-33
13	Step 1>4>3>2	SHORT flame Step sequence	0.06s	0.6s	34-35
14	Step 1>4>2>3	SHORT flame Step sequence	0.06s	0.6s	36-38
15	Step 2>4>1>3	SHORT flame Step sequence	0.06s	0.6s	39-40
16	Step 4>2>1>3	SHORT flame Step sequence	0.06s	0.6s	41-43
17	Step 2>4>3>1	SHORT flame Step sequence	0.06s	0.6s	44-45
18	Step 4>2>3>1	SHORT flame Step sequence	0.06s	0.6s	46-48
19	Step 2>3>4>1	SHORT flame Step sequence	0.06s	0.6s	49-50
20	Step 3>1>2>4	SHORT flame Step sequence	0.06s	0.6s	51-53
21	Step 3>2>4>1	SHORT flame Step sequence	0.06s	0.6s	54-56
22	Step 3>4>2>1	SHORT flame Step sequence	0.06s	0.6s	57-58
23	Step 1>3	SHORT flame Step sequence	0.06s	0.24s	59-61
24	Step 3>1	SHORT flame Step sequence	0.06s	0.24s	62-63
25	Step 2>4	SHORT flame Step sequence	0.06s	0.24s	64-66
26	Step 4>2	SHORT flame Step sequence	0.06s	0.24s	67-68
27	Step 1-4	MEDIUM flame Step sequence	0.4s	1.6s	69-71
28	Step 4-1	MEDIUM flame Step sequence	0.4s	1.6s	72-73
29	Step 1>3>2>4	MEDIUM flame Step sequence	0.4s	1.6s	74-76
30	Step 3>1>4>2	MEDIUM flame Step sequence	0.4s	1.6s	77-79
31	Step 1>4>3>2	MEDIUM flame Step sequence	0.4s	1.6s	80-81
32	Step 1>4>2>3	MEDIUM flame Step sequence	0.4s	1.6s	82-84
33	Step 2>4>1>3	MEDIUM flame Step sequence	0.4s	1.6s	85-86
34	Step 4>2>1>3	MEDIUM flame Step sequence	0.4s	1.6s	87-89
35	Step 2>4>3>1	MEDIUM flame Step sequence	0.4s	1.6s	90-91

36	Step 4>2>3>1	MEDIUM flame Step sequence	0.4s	1.6s	92-94
37	Step 2>3>4>1	MEDIUM flame Step sequence	0.4s	1.6s	95-96
38	Step 3>1>2>4	MEDIUM flame Step sequence	0.4s	1.6s	97-99
39	Step 3>2>4>1	MEDIUM flame Step sequence	0.4s	1.6s	100-101
40	Step 3>4>2>1	MEDIUM flame Step sequence	0.4s	1.6s	102-104
41	Step 1>3	MEDIUM flame Step sequence	0.4s	0.8s	105-107
42	Step 3>1	MEDIUM flame Step sequence	0.4s	0.8s	108-109
43	Step 2>4	MEDIUM flame Step sequence	0.4s	0.8s	110-112
44	Step 4>2	MEDIUM flame Step sequence	0.4s	0.8s	113-114
45	Step 1-4	LONG flame Step sequence	1s	4s	115-117
46	Step4-1	LONG flame Step sequence	1s	4s	118-119
47	Step 1>3>2>4	LONG flame Step sequence	1s	4s	120-122
48	Step 3>1>4>2	LONG flame Step sequence	1s	4s	123-124
49	Step 1>4>3>2	LONG flame Step sequence	1s	4s	125-127
50	Step 1>4>2>3	LONG flame Step sequence	1s	4s	128-130
51	Step 2>4>1>3	LONG flame Step sequence	1s	4s	131-132
52	Step 4>2>1>3	LONG flame Step sequence	1s	4s	133-135
53	Step2>4>3>1	LONG flame Step sequence	1s	4s	136-137
54	Step 4>2>3>1	LONG flame Step sequence	1s	4s	138-140
55	Step 2>3>4>1	LONG flame Step sequence	1s	4s	141-142
56	Step 3>1>2>4	LONG flame Step sequence	1s	4s	143-145
57	Step 3>2>4>1	LONG flame Step sequence	1s	4s	146-147
58	Step 3>4>2>1	LONG flame Step sequence	1s	4s	148-150
59	Step 1>3	LONG flame Step sequence	1s	2s	151-152
60	Step 3>1	LONG flame Step sequence	1s	2s	153-155
61	Step 2>4	LONG flame Step sequence	1s	2s	156-158
62	Step 4>2	LONG flame Step sequence	1s	2s	159-160
63	Step 1-4	3 SHORT flame Step sequence	0.06s	2.04s	161-163
64	Step 1-4	3 MEDIUM flame Step sequence	0.4s	4.8s	164-165
65	Step 1-4	3 LONG flame Step sequence	1s	12s	166-168
66	Step 4-1	3 SHORT flame Step sequence	0.06s	2.04s	169-170
67	Step 4-1	3 MEDIUM flame Step sequence	0.4s	4.8s	171-173
68	Step 4-1	3 LONG flame Step sequence	1s	12s	174-175
69	Step 1-4	FAST flame Step sequence	0.1s	0.4s	176-178
70	Step 4-1	FAST flame Step sequence	0.1s	0.4s	179-181
71	Step 1>3>2>4	FAST flame Step sequence	0.1s	0.4s	182-183
72	Step 3>1>4>2	FAST flame Step sequence	0.1s	0.4s	184-186
73	Step 1>4>3>2	FAST flame Step sequence	0.1s	0.4s	187-188
74	Step 1>4>2>3	FAST flame Step sequence	0.1s	0.4s	189-191
75	Step 2>4>1>3	FAST flame Step sequence	0.1s	0.4s	192-193
76	Step 4>2>1>3	FAST flame Step sequence	0.1s	0.4s	194-196
77	Step2>4>3>1	FAST flame Step sequence	0.1s	0.4s	197-198
78	Step 4>2>3>1	FAST flame Step sequence	0.1s	0.4s	199-201
>78	1	Single Ignition	Firing duration controlled by CH3, max. 2s.		202-255

NOTICE

SHORT flame firing duration is 0.06s, interval is 0.12s; MEDIUM flame firing duration is 0.4s, interval is 0; LONG flame firing duration is 1s, interval is 0.

△ Operation

1. Safety distance explanation

Safety distance for cFlamer Quad divided into two parts safety radius around machine (a) and safety distance at firing direction (b). No person and flammable materials are allowed to stay inside the safety isolation zone when flamer was armed.

The safety radius around machine with a radius of a.


For safety distance at firing direction equals to maximum firing height * 1.5.

Nozzle Type	Max. Flame Height	Safety Radius (a)	Safety Distance at Firing Direction (b)
Combo Nozzle cH	8-10m	3m	15m
Combo Nozzle cL	5-6m	2.5m	9m

Warning: If firing all 4 nozzles at the same time, the flame height will be much higher than 10m, please adjust the safety distance accordingly;

The cFlamer Quad safety isolation zone (show as below) is a cylindrical three-dimensional space with Safety radius around machine (a) and Height of b. Unauthorized persons and objects are strictly prohibited from entering.

For angled installation, the safety distance both around machine and firing direction should shift accordingly.

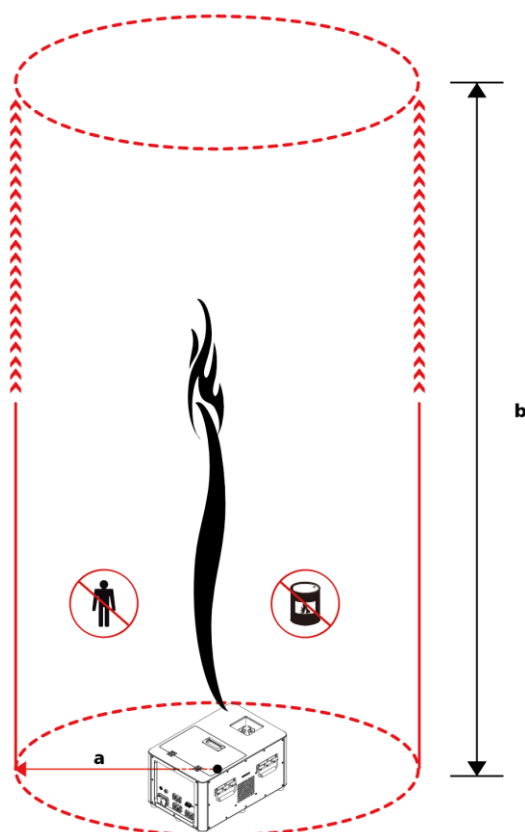


Safety distance in windy environment

Warning: The safety isolation zone radius (a) increase with wind direction and wind speed (v, m/s). The safety distance in windy conditions can be calculated as below: $a + v$;

Warning: When the wind speed $\geq 8\text{m/s}$ (wind force ≥ 5), please use it with caution. When wind speed $\geq 17\text{m/s}$ (wind force ≥ 8) , please stop use the machine.

2. Install cFlamer Quad

- a) Please install cFlamer Quad on firm solid horizontal surface.

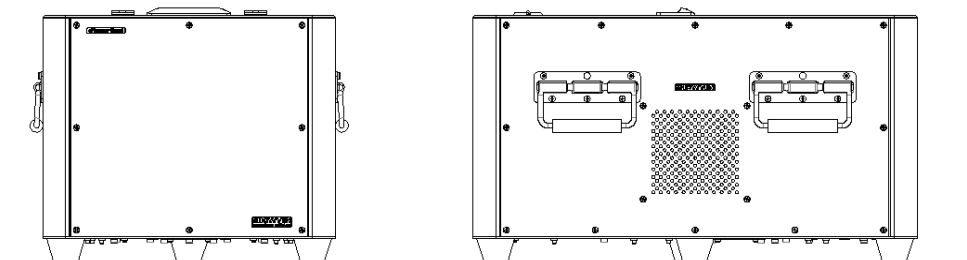

WARNING:

Do NOT install cFlamer Quad in tilt position.

- b) For truss installations always connect with safety rope to ensure extra safety. If there are any other national or regional guidelines, please follow it accordingly.
- c) Double confirm the machine was firmly installed.

WARNING:

Ensure the installation position of cFlamer Quad meet above safe distance requirements. cFlamer Quad supplied with a nozzle cH which generate up to 10m flame.

3. Color fluid preparation

- a) Ensure all containers, fuel tanks etc are clean and free of impurities. Highly recommended to use container/fuel tank with a fixed color, not mix with different colors. If you have no extra tanks, please wash container / fuel tank with clean water thoroughly before using another color fluid.
- b) When washing the fuel tank, add half of the fuel tank capacity of clean water, shake it repeatedly for 30 seconds, pour out the water, and repeat the cleaning process twice.
- c) Perform the mixing operation according to the instructions on the color additive label. For blue, pay special attention to the proportion and addition order. Add 2 bottles (125ml*2) of BLUE A liquid to 5L diluent liquid and shake well and then add 15ml BLUE B liquid. For other colors, just add 125ml color additive to 5L diluent liquid and shake well.
- d) There will be solid precipitate at the bottom of color additive bottle when environment temperature is low, please shake repeatedly to dissolve the solid precipitate before adding it to the methanol.
- e) Please shake and mix the color fluid well before use.
- f) The prepared color fluid needs to be stored with a cap and implemented in accordance with the requirements of the diluent liquid MSDS or local regulations.

NOTICE:

Ensure that the purity of diluent liquid.

NOTICE:

The optimal viewing condition for the color flame effect is in a dark environment.

WARNING:


The preparation operation should be carried out in a well-ventilated place, away from fire, sparks and heat sources. Dry powder or carbon dioxide fire extinguishers should be prepared for use in the operation site.

WARNING:

cFlamer series product compatible with color fluid only prepared with SHOWVEN original color additives, other colored fuels are forbidden to use on the product, It will sure damage the machine.

4. Fill the cFlamer Quad

- Switch safety lock to TEST MODE.
- Fill the fuel tank with qualified color fluid we prepared accordingly, do not mix.

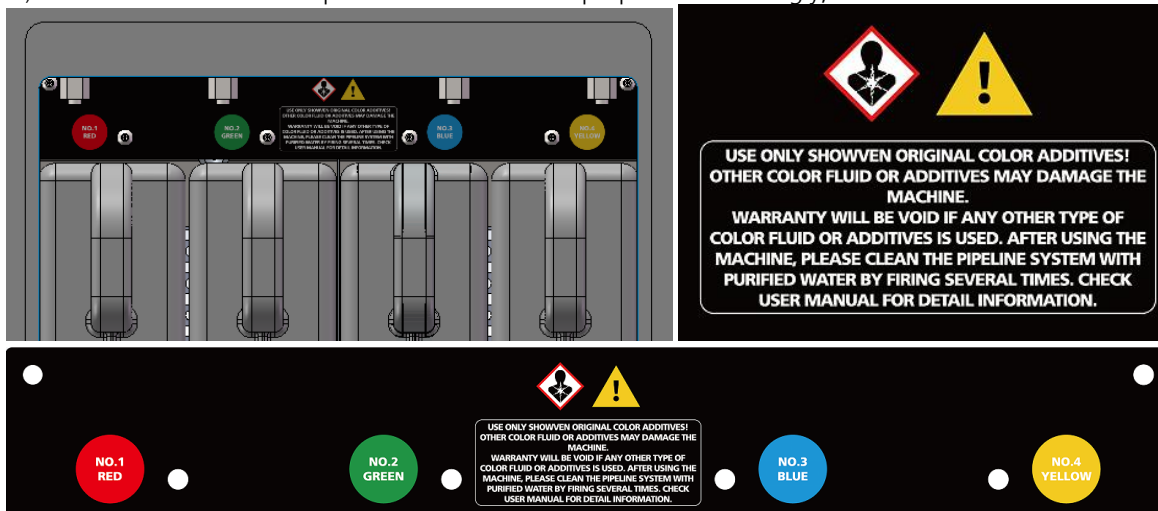

- To avoid color mix, it is highly recommended to fix the color used on each output of cFlamer Quad as we suggest. In case you need to change to another color fluid please execute pump and pipeline clean process (refer to 11. *Pump and pipeline cleaning* of this manual).

NOTICE:

No.1 to No.4 of the color indicator corresponding to output nozzle No.1 to No.4.

WARNING:

The warranty is void if any other type of color liquid or additive is used.

NOTICE:

SHOWVEN excludes liability for the losses, damages and accidents caused by not using qualified fuels in accordance with this requirement.

5. E-Stopper / E-stop terminator Connection

E-stop interface is a power cut-off interface, the machine can be powered on normally only when E-STOP in is connected. For safer use of cFlamer Quad we suggest to connect it with E-stopper. For operators who don't want to use E-stopper can plug a E-stop terminator in E-STOP IN to enable the device.

E-Stopper (optional) connects with a single unit of cFlamer Quad.




E-Stopper (optional) connects with multi units of cFlamer Quad in daisy chain.



NOTICE:

A unit of E-Stopper can control maximum 24 units of device.

Use E-stop terminator (standard configuration): if without E-Stopper. Plug the E-stop terminator to the E-STOP IN port to enable the cFlamer Quad.

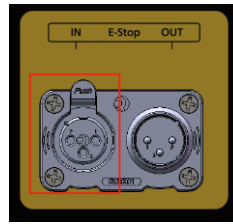

6. Connecting cFlamer Quad

Make sure the DMX or pyro controller is disarmed or powered off during cable connection.

If control by DMX controller, follow below steps:

- Connect a DMX cable to the DMX IN socket of first unit of cFlamer Quad, another head of this DMX cable connects to DMX console (such as FXcommander). Make sure the DMX console is powered off.
- Connect a DMX cable to the DMX OUT socket of previous cFlamer Quad, and the other end to the DMX IN of next machine. Connect all devices in series in this way.
- Suggest to plugging in a DMX terminator into the DMX OUT in the last unit of machine to improve signal reliability. For distance >200m please use SHOWVEN **DMX splitter 8** to amplify the signal.
- Connect a power cable to the POWER IN socket of cFlamer Quad. Make sure the power supply is consistent with the rated voltage of the equipment, and the socket must be well grounded.

Power on all cFlamer Quad. Check the safety lock, double confirm it stays at "TEST MODE".



- Assign DMX address for each unit of cFlamer Quad. If use SHOWVEN host controller or FXcommander to control the machine, please allocate a unique DMX address for each unit of machine.

If control by 9-60V pyro signal, follow below steps:

- Connect a power cable to the POWER IN socket of cFlamer Quad. Connect the other end of the power cable to the power source. Make sure the power supply is consistent with the rated voltage of the equipment, and the socket must be well grounded.
- Connect the power control cables to the 9-60V pyro signal connector on cFlamer Quad.
- Connect the other end of power control cables to the pyro controller (9-60V external trigger source), such as SHOWVEN PyroSlave series module. Before connecting please make sure there is no pyro signal input.
- Power on all cFlamer Quad
- Set the Ext Ignite to ON status in advanced interface, set the firing duration.

NOTICE:

The ventilation fan will be on after cFlamer Quad connects with the power cable, no matter machine was power on or not.

7. Power ON the DMX console / Pyro controller and programming

Power on DMX console and program the cFlamer Quad effect on DMX console or Pyro controller.

8. Test the ignition function of cFlamer Quad

Test the ignition function of cFlamer Quad, we can check whether the igniters of each unit of cFlamer Quad is working fine. Due to the safety switch is stay at TEST MODE there will be only ignition while jet solenoid valve is not open, so no flames generated.

9. Firing

- a) Double confirm the prescribed safety isolation zone is clear, no person, animal or other property within this region.
- b) Switch the safety lock of cFlamer Quad to USER MODE.



- c) Firing, the operator should always have a clear view of the device, so that he/she can stop the show immediately when there is danger.

NOTICE:

Due to the pump and pipeline cleaning procedure after each show, there will be some water remaining in the pipeline, so the first several shots may spray water and fail ignition. Even though please make sure no person, animals or other flammable articles stays in the safety isolation area when firing.

10. Depressurize and Power OFF

- a) Depressurize the flame unit after show or not use flamer for a period
- b) Power OFF DMX console
- c) Press E-Stopper to power OFF all machine (if connect with E-stopper)
- d) Switch safety lock of cFlamer Quad to TEST MODE
- e) Power OFF each unit of machine
- f) Unplug power cable, DMX cable, E-Stopper connection cable etc.

11. Pump and pipeline cleaning

- a) Collect all cFlamer Quad, take the color fluid tank out and replace with water tank with no less than 2L purified water inside.
- b) Connect with power and DMX cables, power on machine.
- c) Pressurize and depressurize cFlamer Quad 3 times of all 4-output pipeline system.
- d) Pressurize machine and firing 3 times with firing duration of 1s, please remember all 4-output nozzle should do this step.
- e) Pressurize and depressurize cFlamer Quad 3 times again of all 4-output pipeline system.
- f) Empty the remaining water in fuel tank

DANGER:

Make sure there is no fuel inside the fuel tank when make cleaning procedure, otherwise it may cause fire.

WARNING:

Pump and pipeline cleaning procedure is a mandatory operation after the machine is used, not to do so will shorten the shelf life of cFlamer series product due to the corrosive of color fluid.

WARNING:

Before the clean test, make sure there is sufficient purified water in the fuel tank. During the cleaning process, the flamethrower will spray a large amount of water, please ensure there is no non-waterproof objects or equipment around.

NOTICE:



Pump and pipeline cleaning procedure is also a necessary operation when using a different color on cFlamer series product, not to do so will cause abnormal flame color due to the remaining fluid from previous firing.

12. Clean and package machine

- a) Clean the water on machine, wait until it dry
- b) Package the machine after it is cools down


Nozzle Replacement and Igniter Position Adjustment

1. Nozzle Types and Flame Height

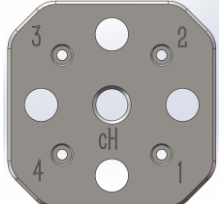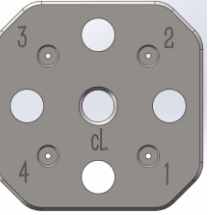
Nozzle Type	Picture	Short Flamer Height (m)	Long Flame Height (m)
combo nozzle cH SFSMA035		5-7m	8-10m
combo nozzle cL SFSMA039		3-4m	5-6m

2. Nozzle Replacement

Remove the four M5 socket head cap screws. Use an M6 bolt (with a length of $\geq 180\text{mm}$) to screw into the disassembly hole in the middle of the nozzle and take out the nozzle. An air gun can be used to blow and clean the removed original nozzle.

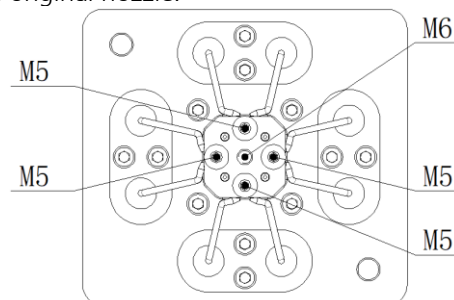


Fix the original nozzle or the new nozzle back to its original position according to the positions shown in the figure below. The nozzle marked "1" is the red fuel nozzle; the nozzle marked "2" is the green fuel nozzle; the nozzle marked "3" is the blue fuel nozzle; the nozzle marked "4" is the yellow fuel nozzle. The positions of the fuel nozzles of each color should be correctly installed in strict accordance with these requirements.

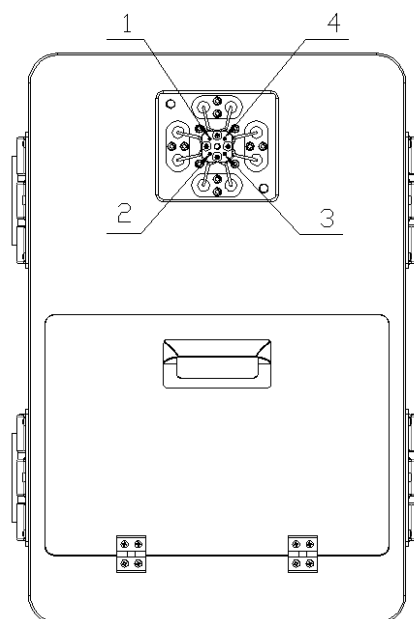

3. Igniter Position Adjustment

Whenever changed the nozzle or ignition is not good, please check the igniter pole position according to the parameters below. The right position for each pair of poles should have a gap from tip to tip of 2.5-3mm (A) and a gap between middle of nearby two igniters of 19mm/22mm (B). Check the ignition successful rate after adjustment by firing.

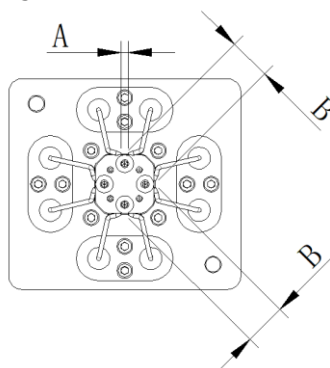

Nozzle	B(mm)	A(mm)
cH	22 ± 1	2.5~3.0
cL	19 ± 1	2.5~3.0

WARNING: Do unplug the power cable and power off the machine when service flamer.

▲ Maintenance

1. Execute pump and pipeline cleaning procedure every time after using the machine to clean the pump and pipeline of machine.
2. To maintain the machine in good performance and running status, it is recommended to run the device at least once per month.
3. Check the ignition probes both before and after each show, if there are any foreign objects on it, please clean it up.
4. Maintenance of the nozzle: Nozzle needs to be cleaned from time to time, and it is recommended that once every six months (depending on the environment and frequency of use). In the process of using the equipment, if the flame shape is seriously deformed or the fuel injection line is significantly deformed or coarsened, the nozzle should be removed immediately for cleaning. If after cleaning, there are still problems please replace a new nozzle.
5. Maintenance of the O-ring: If it is found that the O-ring of the nozzle is damaged or ageing when cleaning the nozzle, the Fluorine rubber O-ring should be replaced in time.

▲ Optional Parts for cFlamer Quad

Part. No.	Description
SFSMA035	combo nozzle cH
SFSMA039	combo nozzle cL
SFMET1107	G1-E-Stop connector
FPEST001	E-STOPPER
RMFLI001	High Quality Flightcase 770* 590* 500mm
RMPCK337	Flightcase carton box
RMBOT036	Safety loop
RMEMD062	5-pin wireless DMX receiver (compatible with FXcommander 2.4GHz wireless DMX)

▲ Warranty Instructions

- √ Sincere thanks for choosing our products, you will receive quality service from us
- √ The product warranty period is one year. If there are any quality problems within 7 days after shipping out of our factory, we can exchange a brand-new same model machine for you
- √ We will offer free of charge maintenance service for machines which with hardware malfunction (except for the instrument damage caused by human factors) in the warranty period. Please don't repair the machine without factory permission

Below situations NOT included in warranty service:

- √ Damage caused by the use of unqualified fuels.
- √ Damage caused by improper transportation, usage, management, and maintenance, or damage caused by human factors.
- √ Disassemble, modify or repair products without permission.
- √ Damage caused by external reasons (lightning strike, power supply etc.)
- √ Damage caused by improper installation or use.

For product damage not included in the warranty range, we can provide paid service.

An invoice is necessary when applying for maintenance service from SHOWVEN.

SHOWVEN[®]



Showven Technologies Co., Ltd.

Tel: +86-731-83833068

Web: www.showven.cn E-mail: info@showven.cn

Add: No.1 Tengda Road, Liuyang Economic & Technical Development Zone, Changsha, Hunan, 410300,
P.R.China